

## Best Buy 8ft. Wearables Display

#### Product Update



4' vivo Wearables Display VPP-M00-10623-00



4' Multisport/Running Wearables Display VPP-M00-10624-00

#### A.

# 4ft vivo Wearables Display



4' vivo Wearables Display VPP-M00-10623-00



#### **UPDATE KIT ITEMS:**



Product Graphic Panel w/ Adhesive Backing



vivosmart 3 update pod



Back Graphic Insert

**A1.** From underneath the display flip the lock latch and pull the product panel up.





**A2.** Locate the product pod wingnuts and unscrew the wingnuts.





**A3.** Remove vivosmart HR+ pod from the panel and set aside for reinstallation. Remove vivosmart HR this pod will be replaced with new unit (vivosmart 3).





A4. Remove vivofit 3 & vivofit jr. pods from the panel and set aside for reinstall.






A5. Remove vivomove pod and set aside and remove old product graphic panel.





**A6.** Locate the new product graphic panel, peel adhesive backing and before pressing down make sure all product screw holes line up with the peg board.

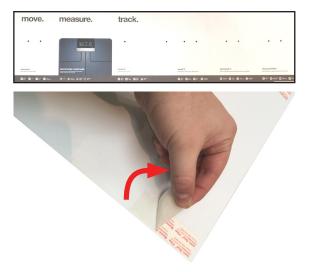



A7. Reinstall vivomove and vivofit jr. pods onto the product panel.





**A8.** Reinstall vivofit 3 pod and Install NEW vivosmart 3 pod onto product panel.







A9. Reinstall vivosmart HR+ pod onto the product panel. Tighten all pod wingnuts.






**A10.** Behind the back panel are four wingnuts loosen these for access into the back graphic panel acrylic.

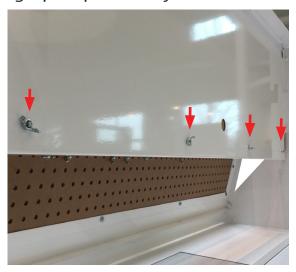

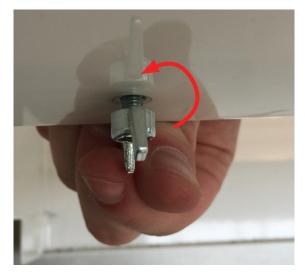


**A11.** From the top hole, push the acrylic panel out and remove the old graphic.

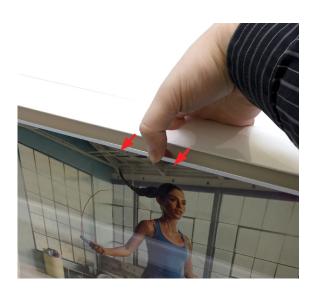



A12. Locate the new back graphic insert and install, push the acrylic back in place.



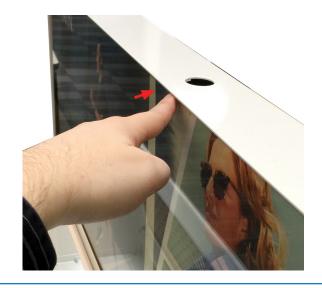

### A13. Tighten all wingnuts and push the product panel back down.





A14. Assembly of 4' vivo Wearables Display VPP-M00-10623-00 is complete.






OLD product panel graphic



OLD back graphic insert

Discard the old vivosmart HR pod and the OLD product panel graphic and back graphic insert

# 4ft vivo Wearables Display

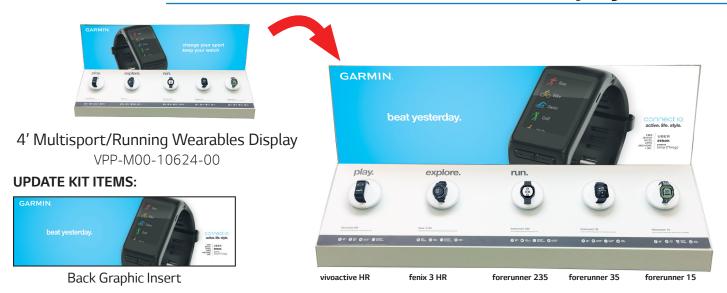


**B1.** From underneath the display flip the lock latch and pull the product panel up.



B.




**B2.** Behind the back panel are four wingnuts loosen these for access into the back graphic panel acrylic.

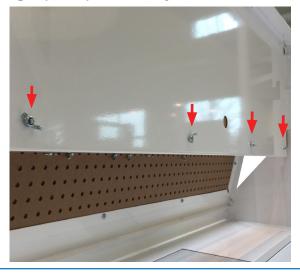



**B3.** From the top hole, push the acrylic panel out and remove the old graphic.

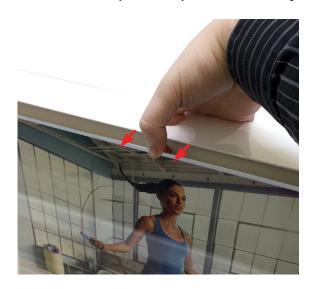




**B4.** Locate the new back graphic insert and install, push the acrylic back in place.





**B5.** Tighten all wingnuts and push the product panel back down.

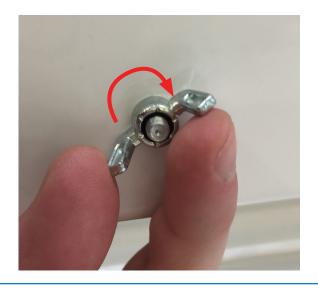



**B6.** Assembly of 4' Multisport/Running Wearables Display VPP-M00-10624-00 is complete.





OLD back graphic insert

Discard the OLD back graphic insert